Your Local Control System gives your central Bang & Olufsen audio/video system an extra dimension. Now you can play any video program or music source you like – and see or hear it in the room in which the extra TV is installed. And of course you have the benefit of an extra TV which you can use independently of the TV in the central video system.

But this is not all. You can even control the central system from that room, using the Beolink remote control.

In short, you will find that the Local Control System brings your central audio/video system within easy reach – regardless of walls or distance.

User's guide

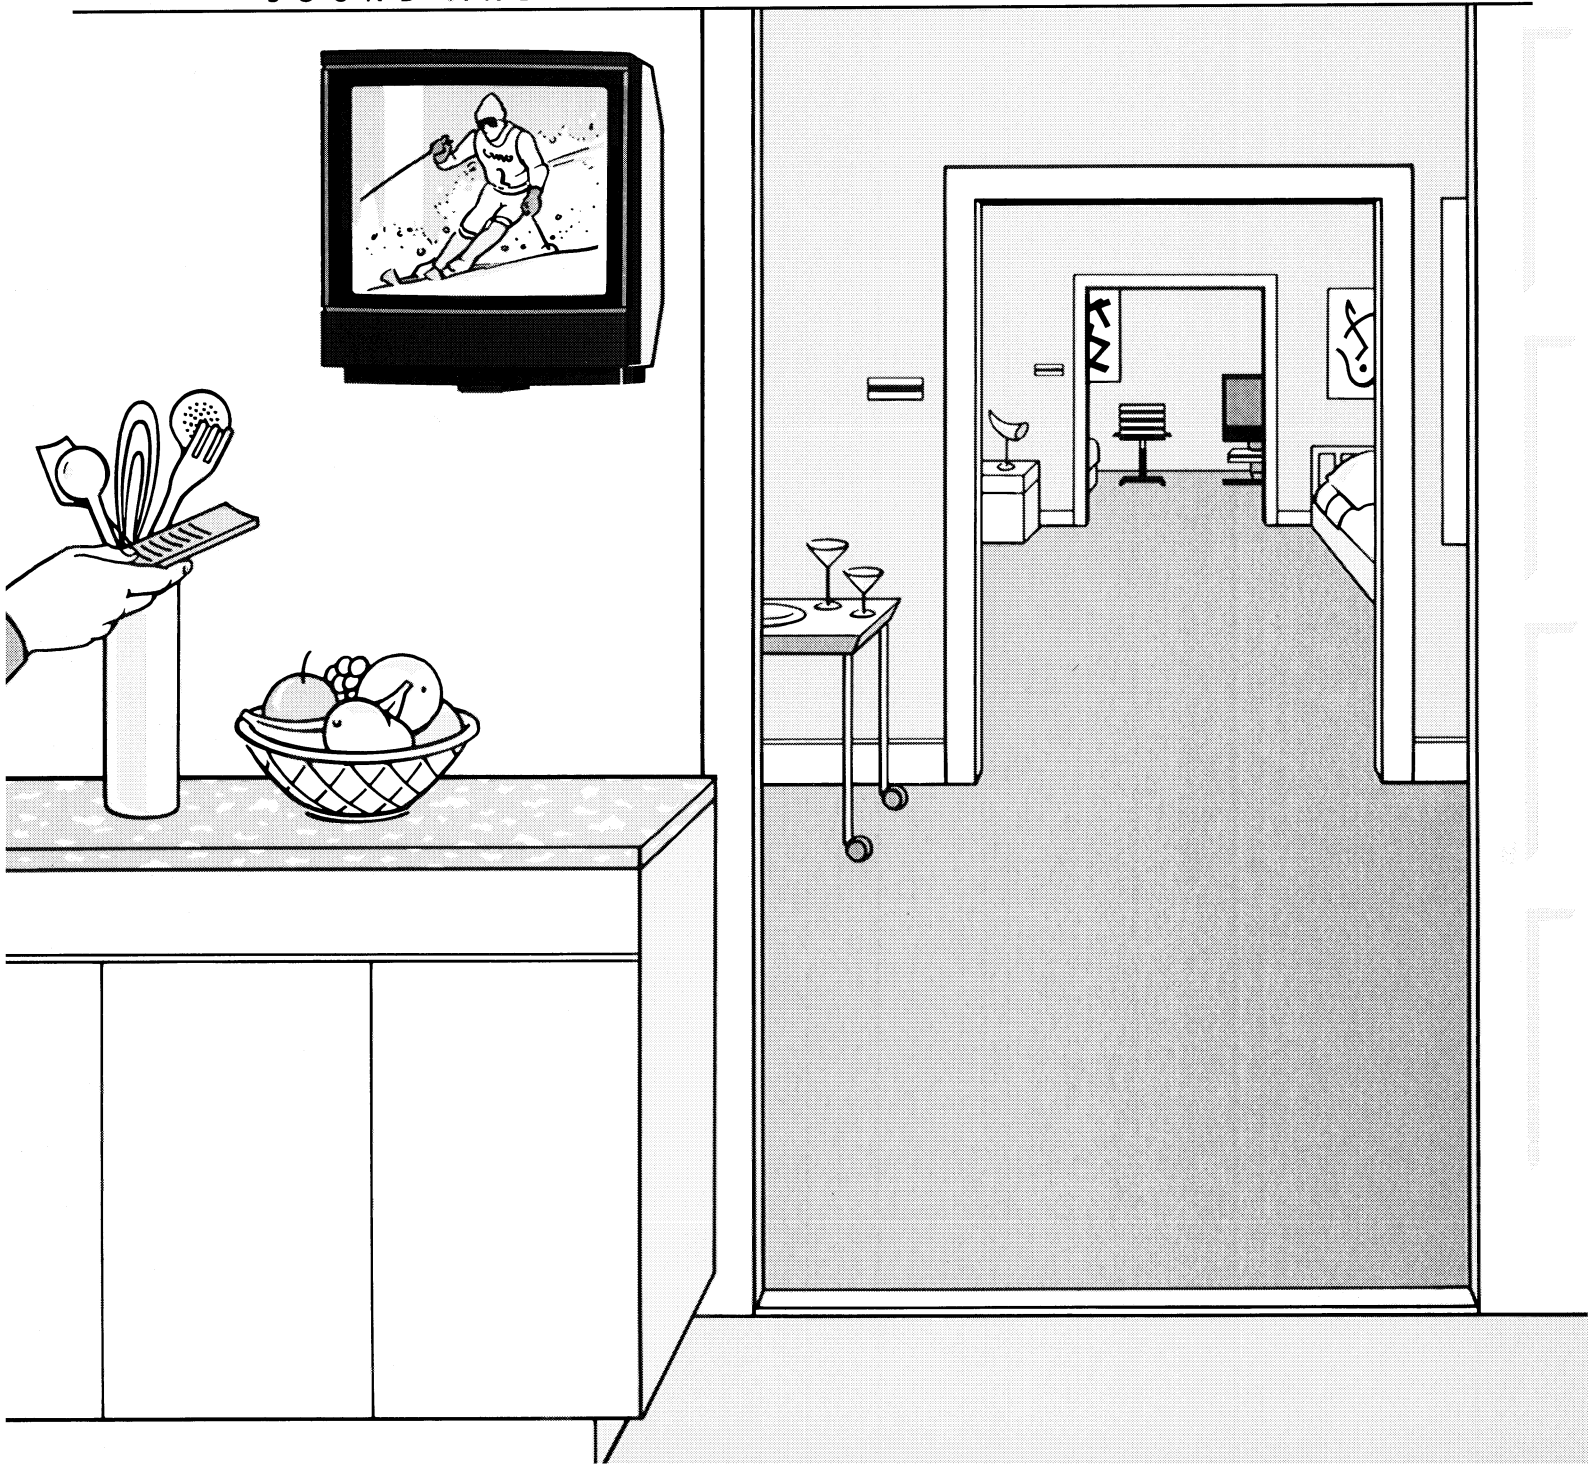

4 Principles of operation
Watching TV and other video programs
Listening to audio sources
Local volume adjustments
6 Using the timer sound control in the X-tra TV
6 Connecting and using local audio sources
7 Using a different type of TV

Note: The separate installation and setting up guide enclosed with your Local Control System describes in detail how to install the system and make it ready for use.

The setting up guide and the user's guide enclosed with your TV give details about all the functions which you can use in your TV alone.

Watching TV and other video programs

When watching TV programs on your X-tra TV, you don't need to communicate with the central system. You just operate the TV in the usual way.

All video tapes and satellite programs that are available on your central system can be instantaneously "transported" to your X-tra TV screen. You can operate these sources locally with a Beolink remote control.

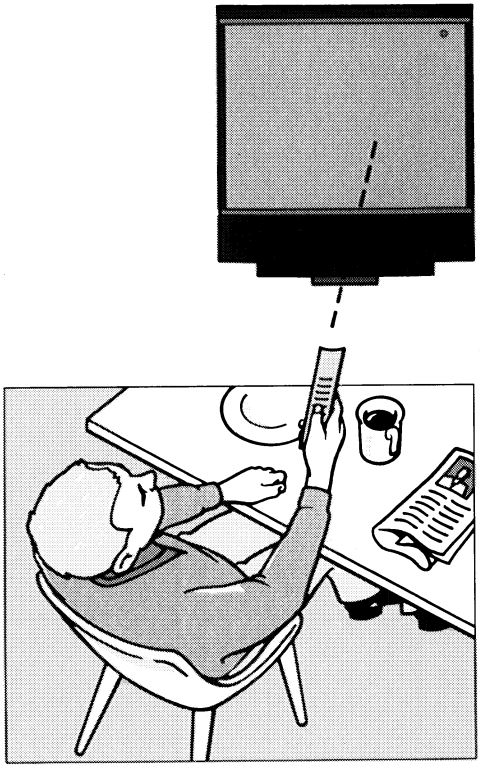

The transceiver in your X-tra TV is your interface with the central system: your commands are received by the transceiver and relayed instantaneously to the central system.

*When you send a command to the central system, your chosen source, for example **V.TAPE**, is displayed briefly on the TV screen.*

Operating procedures for watching TV in a local room with an X-tra TV are explained in detail in your TV user's guide.

> For example:

TV — Turns on the TV

0 *through* 9 — Selects other programs

MUTE — Mutes or demutes the speakers

^ — Raises the volume

v — Lowers the volume

● — Switches off

To watch other video sources originating from your central video system, for example a video tape or a satellite program:

V.TAPE — Starts playing the video tape in the central video tape recorder

SATELLITE — Switches on to a satellite program

SHIFT *then* V.TAPE — Starts playing the video tape in the *second* video tape recorder in your central system

0 *through* 9 — Selects other tracks or programs

Continue operating these sources in the usual way

Note: If you program your central system to make a timer recording (using a two-way communicating remote control), you must select LINK before selecting the central audio or video tape recorder you want to record on.

To start a recording instantly on your central system, you must be in the same room as the central system.

Listening to audio sources

You can listen to the audio sources in your central audio system, and also operate them, via the X-tra TV.

To do so, you will be using your Beolink terminal in exactly the same way as when you are operating your audio system centrally.

> For example:

RADIO — Turns on the radio

CD — Turns on the CD player

A.TAPE — Turns on the audio tape recorder

Unless already in use, the loudspeakers in the central system or in other rooms will ***not*** *be cut in*

0 *through* 9 — Selects other programs or tracks

Continue operating these sources in the usual way

Note: If you program your central system to make a timer recording (using a two-way communicating remote control), you must select LINK before selecting the central audio or video tape recorder you want to record on.

To start a recording instantly on your central system, you must be in the same room as the central system.

Local volume adjustments

You can adjust the volume in the X-tra TV speakers without affecting the other speakers in your house, also if you are listening to an audio source.

You can even preset an individual start-up volume level for your X-tra TV speakers which is different from that in the central audio system.

Switch on an audio source via your X-tra TV,

RADIO — *> for example*

^ / v — *Adjust the volume to the desired level*

SOUND *then* STORE STORE — *Press to memorize the new preset level*

Using the timer sound control in the X-tra TV

The timer sound control in the TV controls the sound from the timer programs you have made in your central audio system.

When such a program starts playing at the specified time, the speakers in the X-tra TV will be cut in.

The timer sound control can be set on or off via the on-screen display for TV setup:

Switch on the TV, press SHIFT, TEXT to see the on-screen display. The first item in the display is that for the timer sound control, that is TIMER ON (on) or TIMER OFF (off). Reveal one or the other, using the button on your Beolink terminal (for example >) which you usually use to reveal alternative options in an item.

The setting up guide for your TV (black booklet) explains the on-screen display for TV setup in detail.

Connecting and using local audio sources

The two sockets marked TAPE and CD on the MCL 2 AV socket panel are for connection of local sources:

TAPE: Socket for connecting an audio tape recorder.

CD: Socket for connecting a compact disc player, or a record player with a built-in RIAA preamplifier.

You can connect local audio sources equipped with Datalink and operate them as usual.

Of course, you can also operate audio sources in your central system from a local room.

Note: If you are using one of the sources in your central audio system as a source for recording on the local tape recorder, any volume adjustments will affect the recording level.

Operating from a local room, using a Beolink remote control:

To operate local audio sources:

A.TAPE — Turns on the audio tape recorder

CD — Turns on the compact disc player, or a record player with a built-in RIAA preamplifier, if connected to the CD socket.

To operate audio sources in your central system:

LINK — Accesses the central system

then

A.TAPE — Press the audio source desired

or

CD

If your X-tra TV is of a type other than the Beovision MX 3500 or other TV's in the same family, some operations will be affected:

- *You will need a transceiver to obtain the timer sound control.*
- *Operating the sources in the central video system will differ slightly from what is described on page 4.*
- *This type of TV is designed for one-way communication only and not optimized for use with a two-way remote control.*

Central video system operations

How to "transport" a video tape or a satellite program from your central video system to your X-tra TV screen.

TV — Press to switch on the TV

Select the program number on which you have stored the video frequency,

9 — > *for example*

LINK — Press to access the central system

then

V.TAPE

or

SATELLITE

Then press the source you want to receive and continue operating in the usual way

Transceiver operations

There are two controls on the transceiver which you can operate close-up. They perform a number of different functions.

Timer sound control

The left-hand key, labelled TIMER, controls the sound from the timer programs you have made in your central audio system.

When such a program starts playing at the specified time, the speakers in the X-tra TV will be cut in. This is indicated by the red TIMER light on the transceiver panel.

You can cancel the timer function in your Local Control System, so this particular set of speakers will not be cut in when the program starts playing.

To cancel the timer function locally, press TIMER.

The red TIMER light disappears.

Press TIMER again if you want to restore the timer function locally.

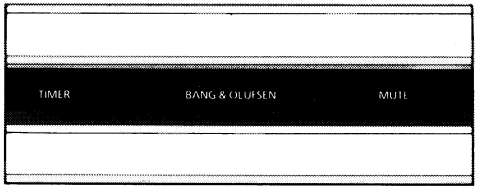

Instant sound control

The right-hand key, labelled MUTE, enables you to start up the central audio system instantly.

The X-tra TV speakers will reproduce the sound from the central audio system.

Press MUTE to switch on the central audio system.

You will hear the program or source last played on the central audio system. The red stand-by light in the transceiver disappears.

Note: You must use the Beolink terminal to operate all other functions in the central audio system or in the X-tra TV. You will for example use the MUTE button to mute the speakers in the X-tra TV, and you will use the stand-up button ● to switch off the X-tra TV. To switch off the entire system press SHIFT, then ●.

Date purchased

Contact person

Dealer

Telephone

Address

Dear Customer,

Your needs as the user of our products are always given careful consideration during the design and development process, and we strive to make our products easy and comfortable to operate.

We therefore hope that you will take time to drop us a line, telling us about your experiences with your Bang & Olufsen system. Anything which you consider important – positive or negative – may help us in our constant efforts to refine our products.
Thank you!
Please write to:

Sonja Nicolaisen
Bang & Olufsen a/s
DK-7600 Struer
Denmark

Text: Bang & Olufsen a/s
Graphic design: Sally Beardsley
© Bang & Olufsen 1990

3501125 0909